

Trouble shooting - Heatmaster open gas fire

Issue	Cause	Solution
Pilot won't light	<ol style="list-style-type: none"> 1. Pressure too low 2. Faulty electrode or connection 	<ul style="list-style-type: none"> • Ensure the pressure is set correctly • Check spark at electrode, if none, check lead connection. If this has not solved the problem, replace the electrode.
Pilot ignites but won't stay on	<ol style="list-style-type: none"> 1. Faulty thermocouple 	<ul style="list-style-type: none"> • Replace thermocouple
Flame does not stay alight, or very little flame	<ol style="list-style-type: none"> 1. Pressure too low 2. Faulty thermocouple 3. Excessive draught 	<ul style="list-style-type: none"> • Ensure the pressure is set correctly • Replace thermocouple • Ensure you have an approved gas cowl fitted correctly