



### STEP 1

Ensure that the power supply to the firebox is switched on.

### STEP 2

To ignite your Seamless press and release the power (PWR) button. This will begin the ignition sequence which will purge the air from the firebox for approx 30 seconds before igniting the burner.

Ensure that your remote is set to MANUAL (this will be displayed at the bottom of your LCD screen once you press the PWR button). To switch between MANUAL and AUTO press the A/M button. – for Auto programming and time setting refer to the 7000 series thermostat user manual.

### STEP 3

Press the A/M button to switch between thermostat and flame only setting:

- Flame only (decorative setting) is indicated by a flame icon in the middle panel or your remote.
- Thermostat setting is indicated by your desired temperature in the middle panel of your remote.

To adjust the fan/flame setting simply use the up or down button to change the set temperature.

- Next: to set the temperature you will notice a small 1, 2, or 3 which indicates the level of the fan & flame. Level 1 being the lowest and 3 the highest. The picture of the flame will also adjust to indicate which level you are on. As you increase the gap between the set temperature and then room temperature the level of the flame & fan will increase. As the room temperature gets closer to the set temperature the flame & fan will modulate down to a lower level.

Once the room temperature has reached your set temperature the back burner & fans will turn off until the room drops below the set temperature again.

### STEP 4

To turn off your Seamless press the power button.

### PLEASE NOTE:

Fan will continue to run until firebox cools down.

This is a basic guide only for complete instructions on the use of your Enviro refer to the Customer operating information & instruction guide along with the 7000 series thermostat user manual.