

Heatmaster enviro Log Kit




HEATMASTER
heatmaster.com.au

IMPORTANT: It is important that the flame igniters, flame sensors and burners are not in contact with any Log. This can cause the unit to malfunction.
The flame sensor should sit approx. 10mm off the burner The igniters should sit approx. 5mm off the burner

Heatmaster enviro embers

1. Take care when handling embers and wash hands immediately after use
2. Optional embers are to be placed around the burner ports to simulate the glowing look of a traditional fireplace.
3. Use only a tiny amount and save the remanning
4. Pull apart into fine and thin pieces and do not stack or overload.
5. It is important that you only place a small amount of embers around the ports and make sure you stay away from the flame igniters and flame sensors as this can cause the unit to malfunction



IMPORTANT: It is important that the embers are clear of the flame igniters and flame sensor, if not his can cause the unit to malfunction.
The flame sensor should sit approx. 10mm off the burner The igniters should sit approx. 5mm off the burner